

# bosal

**Инструкция  
по монтажу тягово-сцепного  
устройства шарового типа 1216 А  
для автомобилей  
ВАЗ-2114  
ВАЗ-2115**

-2114 -2115	2003 -... 2007-....
	750
	75
	11,75



462800,

« - »  
18  
: (35363) 7-05-06  
./ : (35363) 7-13-20  
(495) 785-66-07

[www.bosal-autoflex.ru](http://www.bosal-autoflex.ru)

« - »:	" (8182) 22-48-15
"	" 8(8442) 98-74-98
"	" 8(343) 379-39-89, 373-42-73
"	" 8(343) 26-88-308
"	" 8(3952) 710-194
"	" 8(495) 777-54-59
"	" 8(495)745-79-11
"	" 8(495) 788-95-97
"	" 8(495) 720-51-03
"	" 8(3532) 57-99-85
"	" 8-905-899-5012
"	" 8(383) 291-59-60
"	" 8(831) 279-53-24
"	" 8(3422) 98-27-20
"	" 8(342) 220-87-87
"	" 8-927-002-90-06
"	" 8(3462) 24-00-44
"	" 8(3842) 21-14-76
"	" 8-902-940-4151
"	" 8(3452) 32-22-12, 41-52-62
"	" 8-961-213-0278
"	" 8-917-347-1700
"	" 8(351) 269-44-75, 900-72-73
"	" 8(3512) 773-76-91

41.55-2005.

« », -2115

« »)

d=10,5

100

d= 18

( )

8 ( -2114


Гайка М8  
Шайба 8

Болт М10х90

Гайка М10самоконтр.

Шайба 10

Втулка L=28

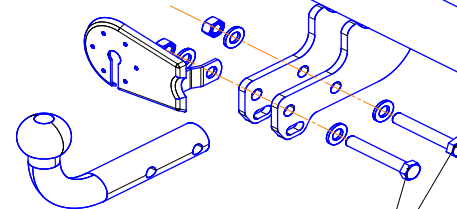

Болт М12х1,25х75

Шайба 12

Гайка М12х1,25 самоконтр.

а б

	1
	1
	1

	3
10 90	2
12 1,25 75	2
10 /	2
12 1,25 /	2
8	4
10 ( )	4
12	4
L = 28	2
VH 0186	1
	1
	1
130	1
	1

1			
2			
3			
4			
5			
6			
7			

Схема обрезки кабеля

