

bosal

Инструкция по монтажу тягово-сцепного устройства шарового типа 4351 А для автомобилей Nissan Murano

	2005-...
	1500
	80
	17.6



462800,


« - »

18

.: (35363) 7-05-06
/ : (35363) 7-13-20
(495) 799-13-46
www.bosal-autoflex.ru
www.bosal.com

« - »	(8182) 22-48-15
" - "	" 8(8442) 98-74-98
" - "	" 8(343) 379-39-89, 373-42-73
" - "	" 8(343) 26-88-308
" - "	" 8(3952) 710-194
" - "	" 8(495) 777-54-59
" - "	" 8(495) 745-79-11
" - "	" 8(495) 788-95-97
" - "	" 8(495) 720-51-03
" - "	" 8(3532) 57-99-85
" - "	" 8-905-899-5012
" - "	" 8(383) 291-59-60
" - "	" 8(831) 279-53-24
" - "	" 8(3422) 98-27-20
" - "	" 8(342) 220-87-87
" - "	" 8-927-002-90-06
" - "	" 8(3462) 24-00-44
" - "	" 8(3842) 21-14-76
" - "	" 8-902-940-4151
" - "	" 8(3452) 32-22-12, 41-52-62
" - "	" 8-961-213-0278
" - "	" 8-917-347-1700
" - "	" 8(351) 269-44-75, 900-72-73
" - "	" 8(3512) 773-76-91

41.55-2005.

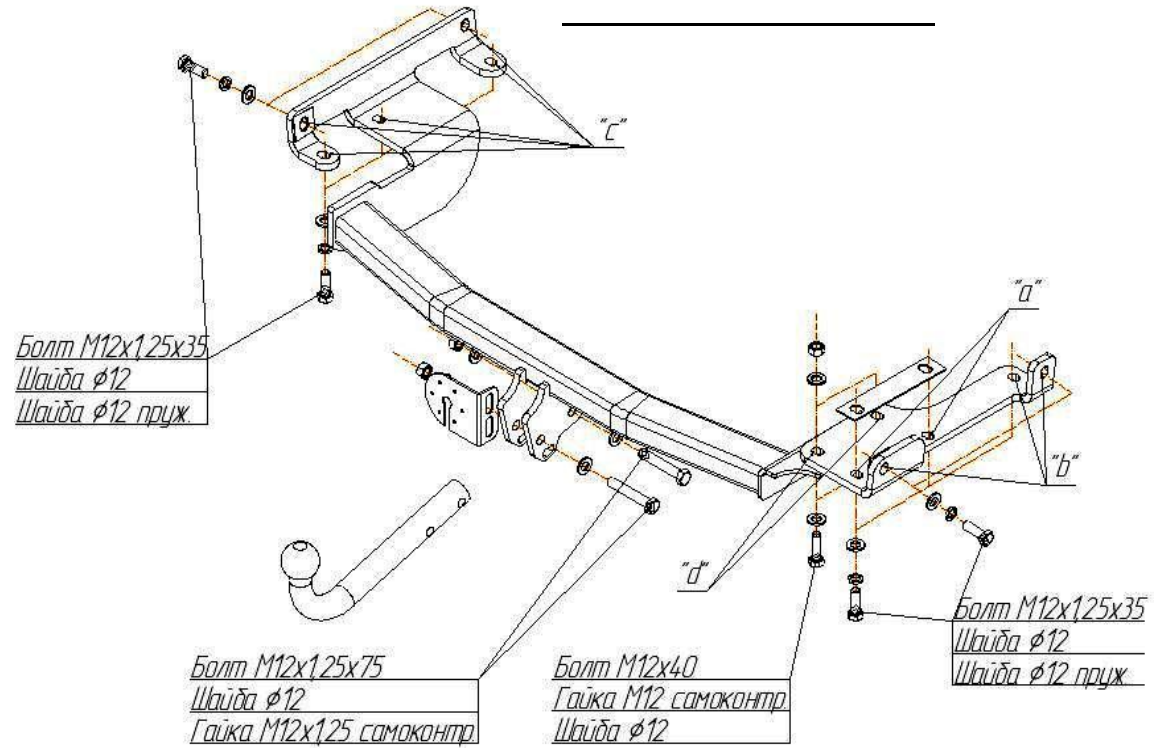

“a” “b”,

“c”.

	1 .
	1 .
	1 .

	3 .
12 1,25 35	10 .
12 40	2 .
12 1,25 75	2 .
12 1,25 /	2 .
12	2 .
12	10 .
12	18 .
	1 .
	1 .
VH0830	1 .
	1 .
	1 .
190	1 .
	1 .
	1 .

